funtronic

EasyBoard

Polish Interactive Whiteboard

manual 2.0

www.etablica.eu

Thank You for choosing the Polish Interactive Whiteboard,

designed and produced in Poland.

Thank You for supporting Polish electronic industry.

IMPORTANT SECURITY RULES

- Please, read this manual thoroughly in order to use this product effectively,
- Should you need any servicing help, contact the Funtronic company service centre,
- The Funtronic company is not responsible for any lost benefits or losses caused by the product inefficiency,
- All brand names and names of products appearing in this manual are registered trademarks and belong to their owners,
- Technical data given in this manual can be changed without previous warning.

DANGER

- Do not try to modify this device in any way. You may cause fire, injury, electrical shock or serious damage of this device. All testing and servicing can be done only by the Funtronic company service centre.

WARNING

- Use batteries only of the type which fulfils technical requirements of this device. Do not connect cables in a forbidden way, do not heat or burn batteries. Do not install batteries with incorrect polarity.
- The product cannot be placed close to a source of fire or direct sunlight. Avoid electrical discharge and short-circuits, they may damage this device.
- Be careful and do not look for a longer period of time straight into the lens, the pen and projector light attached to the product (very important for children).
- While attaching the camera to a computer with a USB cable make it sure the cable will not be pulled out accidentally (for example during walking by). It is suggested to use an original USB cable delivered with the board.
- The most convenient attaching the camera is directly and permanently on the projector, making it impossible to move accidentally.

A worn out device should not be thrown away, it should be returned to the producer or a utilization company .

all rights reserved

List of content

1 General information....4
1.1 Product description....4
1.2 What is in the box?....5
1.3 System requirements....5
1.4 Classroom 5
2 How to install?....6
2.1 Installation in the fixed mode....7
2.2 Installation in the portable mode....9
2.3 The software installation....10
2.3.1 Windows....10
2.3.2 MacOS....10
2.3.3 Linux....11
2.4 Remarks for installator....12
2.5 FAQ....15
3 Starting up....16
3.1 The EduTool software....17
3.1.1 The EduTool application....17
3.1.2 The EduTool graphical panel....20
3.2 Positioning and the first camera calibration....24
3.3 Electronic pen operation....26
3.4 FAQ....26
4 Maintenance instruction....28
4.1 Battery replacing....28
5 FAQ....29
6 Technical specification....30

all rights reserved

1 General information

1.1 Product description

The Polish Interactive Whiteboard is designed with the thought of every school. It offers high quality, possibility of fast writing, reliability and a good price. It gives two modes of operation: a mouse mode to navigate applications like a multibook and a graphic mode.

The Polish Interactive Whiteboard enables writing with the electronic pen on every, non-reflective surface on which a picture from the projector is presented. The surface can be: a non-reflective whiteboard, a screen or a wall. The camera attached to the projector watches the movement of the electronic pen and sends the information to the computer through the USB cable.

The software which steers the board enables the work of the electronic pen in a mouse mode. The enclosed free graphical software has many functions useful while conducting a presentation or a lesson: writing, marking, erasing, drawing, enlarging (zoom), etc. There is also a possibility of storing the screen and printing it. The software works transparently and allows to navigate any programme or a desktop of a computer .

The usage of an electronic pen is very similar to a one-button mouse and it operates intuitionally. An ergonomic construction and the only one button makes the pen a very friendly tool for everyone – whatever the age and skills. The Polish Interactive Whiteboard offers high resolution, short time of reaction and proper sensitivity .

More information available on: www.etablica.eu.

all rights reserved

1.2 What is in the box?

Set content:

- 1 optical module,
- 2 electronic pens with batteries,
- 1 CD with manual,
- 1 USB cable (5 m),
- 1 installation kit (anti-slip pad),
- printed version of short manual and warranty document.

Optional:

- telescopic e-pointer with batteries

1.3 System requirements

For proper interactive whiteboard operation there is a need for PC with Windows XP/Vista/7, Linux or MacOS operation system, USB port and CD drive (for SW installation).

1.4 Classroom

Classroom, where interactive whiteboard is going to be used, must have dark and impervious curtains or roller blinds (i.e. not letting sunlight going through), allowing full overshadowing in case of sunny day.

all rights reserved

2 How to install?

The Polish Interactive Whiteboard is designed for the installation done by the users. All details are presented in the **User Manual** available on the enclosed CD. The user may find more information on the www.etablica.eu.

The Polish Interactive Whiteboard can be installed without any help of the producer. To make it properly the user should follow the steps :

STEP 1: the optical camera installation

STEP 2: the software installation

POLISH INTERACTIVE WHITEBOARD INSTALLATION

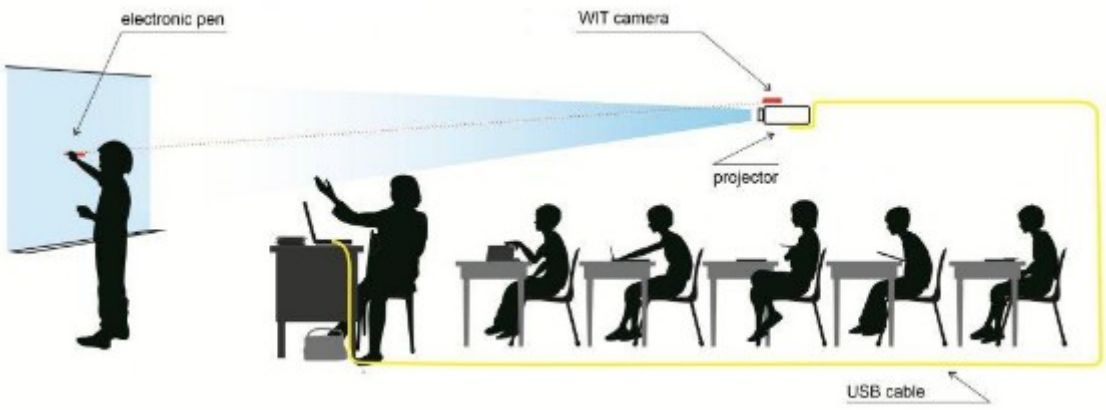

***NOTE**: ZOOM in the projector should be set to minimum.*

all rights reserved

2.1 Installation in the fixed mode

To install the camera properly, the user should follow the steps :

STEP 1: Choose the right place for the camera – above or in front of the projector intended to be connected with the camera .

STEP 2: Install the metal angle and screw it to the projector hanger in a way to be as close as possible to the axis of the projector lens.

STEP 3: Put the camera on the metal angle so both camera and projector look in the same direction. The camera can be installed on the projector in any, however stable way i.e. disabling any unwanted movement. It can be done with double sided tape, anti-slip pad or metal clamp.

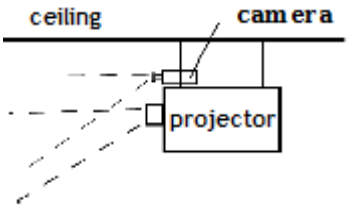

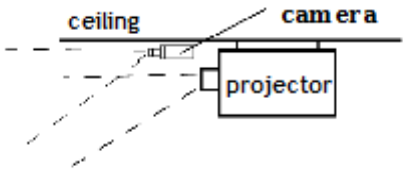

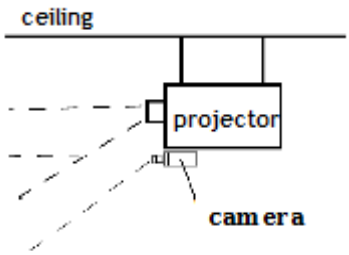

Suggested way of installing the camera

Not suggested way of installing the camera

ATTENTION:

1. *If the ceiling is the place for installing the camera (projector), it should be placed upside-down (the bottom of the camera facing oriented to the ceiling just like the projector).*
2. *If the screen is the one with the backside projection, the camera can be placed behind the screen, together with the projector.*
3. *In case of portable operation, put the camera directly on the projector (on the enclosed anti-slip pad) as close as possible to the axis of the projector lens.*

all rights reserved

STEP 4: Connect the camera and the computer with the enclosed USB cable. The camera is fed straight from the computer via the USB port.

ATTENTION:

1. *The maximum length of the USB cable which allows the camera to operate correctly is 10m. If the distance between the camera and the computer is farther, the USB cable with an amplifier should be used. Additional cables can be ordered from the producer's or bought in any shop with computers' accessories.*
2. *The camera can be connected with the computer all the time .*
3. *The camera should be placed near or directly to the projector on its top surface. Such placement of the camera allows the user to expose intuitionally the areas pointed with the electronic pen.*

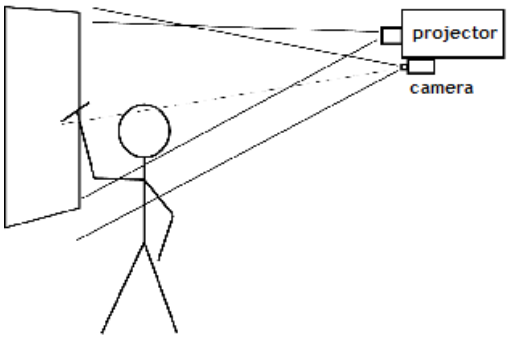

The pen might be overshadowed instead of full visibility of a picture.

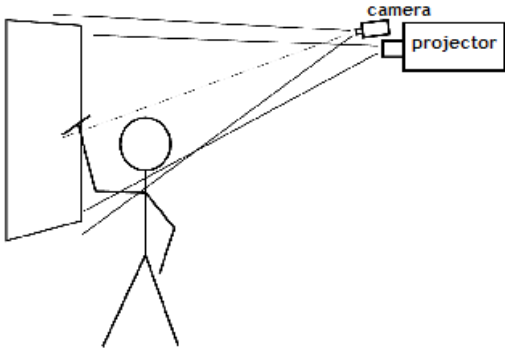

Full (correct) visibility of the pen

5. *The distance from the screen should be twice farther than the width of the screen, however, not bigger than 5m. If the distance is farther, the board cannot be operated correctly. If the sunlight is very bright, the usage of curtains or roller blinds is suggested.*

The exemplary distances from the screen	
The width of the screen	*The distance from the screen*
1 m	*2 m*
1,5 m	*3 m*
2 m	*4 m*
2,5 m	*5 m*

all rights reserved

2.2 Installation in the portable mode

To run interactive whiteboard, the user should follow the steps :

STEP 1: Stick the anti-slip pad on the projector

STEP 2: Put the camera directly on the anti-slip pad parallel to the axis of the projector lens so it looks into the same direction as the projector.

STEP 3: Connect the camera and the computer with the enclosed USB cable. The camera is fed straight from the computer via the USB port.

all rights reserved

2.3 The software installation

The latest SW version is always available for free download at www.etablica.eu.

2.3.1 Windows

The person who is going to install the EduTool software should have the administrator rights of operating system in the computer.

To install the EduTool software the user should put the enclosed CD to the drive, double click on the icon of the installation programme **EduTool_Installation.exe** and next follow the commands shown on the screen. Installation software can been located in the following catalog: ***EduTool_software_for_business/WINDOWS/***

The process of the EduTool software installation runs automatically. After having been installed, the EduTool software will be available from the menu START. To make the usage more convenient, the shortcut for the EduTool application will be placed on the computer desktop.

The EduTool software can be removed at any time with available de-installer.

2.3.2 MacOS

The person who is going to install the EduTool software should have the administrator rights of MacOS operating system in the computer.

To install the EduTool software the user should put the enclosed CD to the drive, mount in the system (double click) the image file **EduTool-1.0.dmg** and next move the icon "EduTool" to "Applications" folder and run (double click) driver **FTDI FTDIUSBSerialDriver.mpkg** installation software. Installation software can been located in the following catalog: ***EduTool_software_for_business/MacOsX/***

The process of the EduTool software installation runs automatically. After having been installed, the EduTool software will be available from the menu "Applications".

all rights reserved

2.3.3 Linux

The person who is going to install the EduTool software should have the administrator (root) rights of Ubunt Linux operating system in the computer.

To install the EduTool software the user should put the enclosed CD to the drive, double click on the icon of the installation package **EduTool_1.0.0-all.deb** and next follow the commands shown on the screen. Installation software can been located in the following catalog: ***EduTool_software_for_business/Ubuntu_Linux/***.

The process of the EduTool software installation runs automatically. After having been installed, the EduTool software will be available from the menu “Applications”.

WARNING: The EduTool software is compatible with XFCE windows manager.

all rights reserved

2.4 Remarks for installator

Before you start installing Polish Interactive Whiteboard please read carefully below comments. In case of further question please contact local or producer's service centre.

- The working surface (the screen) as well as the optical camera should be installed as far from the windows as it is possible, however, there must be some room for the user, about 0.5 metre from each side.
- The projector should be installed under the classroom ceiling, about 2.5 – 3 metres from the screen, giving the picture about 1.3 – 1.5 m wide, 0.9 – 1.0 m height so the user can reach easily the upper edge of the screen.
- The projector as well as the camera must be installed under the celling in the upside-down position. If the projector has already been installed in a standard position, it is suggested to change it for “upside-down”.
- The projector and the camera should be delivered separately - with the mounting tray - the power supply, video (and eventually audio) signal for the projector and the USB cable for the camera. An electric outlet can also be placed on the ceiling next to the projector.
- The optimum distance between the projector and the floor is about 2-2.4 m. If the projector is placed higher, in correctness in positioning the pen may increase.
- ZOOM of the projector should be set to minimum.
- The camera should be placed above the projector as it offers higher comfort of work - the possibility of overshadowing the pen is smaller. If the board is placed under or beside the projector, it will also work correctly, however, the possibility of overshadowing the pen during work will increase.
- The camera should be installed steadily, with a clumping ring or an strong adhesive tape. It is also possible to use an angle bar and mount it for example to the projector hanger. The position of the camera may change if the USB cable is stressed too much.
- The camera should be more bent (around 10 degrees) towards the floor than the projector so after calibration, the green working field *(projector view)* is placed

all rights reserved

in the lower part of the camera view window *(camera view)*.

- It should be made sure that there are no any reflective objects in the camera view such as aluminium frames giving sharp light's reflections in case of sunshine or lamps shining towards the camera. An aluminium frame of the existing board should be pasted with black tape.
- As a screen, any mat or half-mat whiteboard can be used. In case there is no physical board, any MDF or HDF furniture board (available in all D-I-Y stores) can be installed for this purpose.
- Before the camera is finally installed it should be properly positioned. First of all the camera should be connected to the power supply (a computer USB port). The control LED light of the camera will be red and after 3 seconds from the connection it will blink green confirming proper functionality. The control LED light of the camera should be watched during movement of the electronic pen with button pressed on the working area: red light – the pen is invisible, yellow-green colour – the pen is visible. A correctly positioned camera reacts to the pen in every corner of a working area (projected picture).
- With the pen switched off, the yellow-green colour CANNOT occur at any time. The control LED camera diode should emit red light all the time. If it does not happen, it means:
  - bright sunshine,
  - reflections in the view area of the camera,
  - light sources which lights into camera's eye.

  Otherwise, (if for example the camera blinks with the closed lens), the user should contact the manufacturer's service.
- Classroom, where interactive board is installed must have blinders or curtains to be able to fully shadow the room if case of sunlight. Ordinary fabric material roller blinds are not recommended as they diffuse the light instead of eliminate. Usually, the one tight blind for the window close to the interactive board is enough.

all rights reserved

REMEMBER!

- **Before you calibrate the interactive board, check the visibility of all four corners of the projector's view by clicking on each of them with electronic pen (indicator "Signal strength" lights up yellow or green, indicator LED light in the camera lights up yellow)**
- **After installing the camera, connecting to a computer and starting the EduTool application, signal indicator in the calibration window should show "0" - gray indicator should cover up just letter "N" in the word "None"**
- **After applying the electronic pen to the board and pressing the button, the signal strength should show more than 1/3 the length of the indicator (yellow or green color). If the camera is mounted in the distance of 2.5 m from the wall and recommended board is used than indicator should shows almost 100%.**

POLISH INTERACTIVE WHITEBOARD INSTALLATION

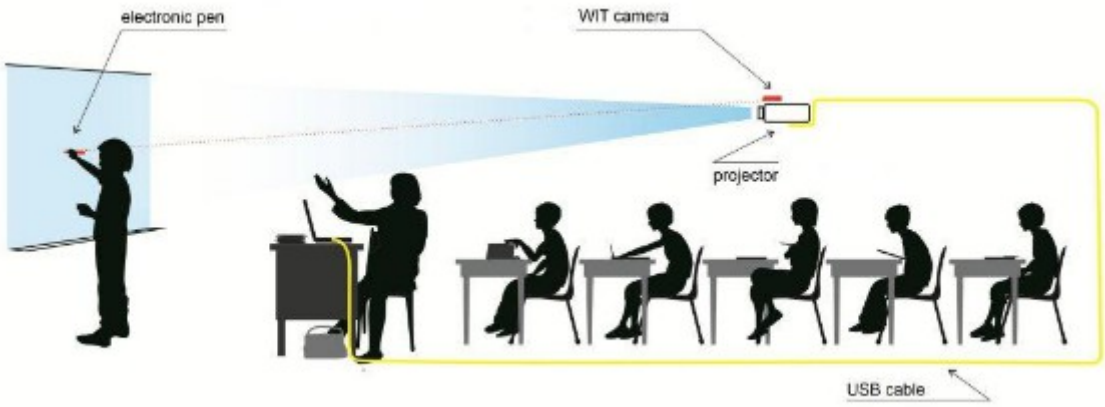

all rights reserved

2.5 FAQ

Question	Answer
Where can I find the installation manual?	The enclosed CD contains the detailed installation manual
Should I buy a projector to use the interactive whiteboard?	Yes, you should. Typically every interactive whiteboard requires a projector which is an additional (peripheral) element
Can I use my own projector?	Yes, you can. To make your work more comfortable you need an ordinary projector, NOT a short throw one. In case you have a short throw one, the camera must be placed in the double distance of the screen, behind the projector. ZOOM in the projector should be set to minimum.
What screen do I need for the interactive whiteboard?	Any non-reflective. This can be a whiteboard or white sheet of hardboard mounted on a wall, or even a wall itself.
Can I install the EduTool software on more than one computer in my school?	Yes, you can. The EduTool software on the enclosed CD can be installed on any numbers of the computers in the school.
Can I order more pens?	Yes, you can. The pens are available in constant sale. Please, contact our sales department
Can I use two pens to write on the board in the same time?	No, you cannot. The whiteboard can operate only one pen at a time.
Is the installation by the producer required for the interactive whiteboard?	No, it is not. The installation is not complicated and can be done without producer's help. There is a detailed manual on the CD which is delivered in the box
Is the full overshadowing of the classroom with interactive whiteboard required?	No, it is not. However, the classroom must have the curtains or roller blinds to overshadow the room in sunny days.

all rights reserved

3 Starting up

To start the Polish Interactive Whiteboard successfully the user should take following steps:

STEP 1: Start the projector (ZOOM set to minimum) and the computer with the EduTool software installed.

STEP 2: Make sure that the camera and the computer are connected with the USB cable .

STEP 3: Start EduTool application (from the Start menu or desktop icon)

STEP 4: Make the initial calibration of the camera (see point 3.2) – this refers to the first starting of the interactive whiteboard or starting after changing of the camera position.

The Polish Interactive Whiteboard set is ready to be used.

all rights reserved

3.1 The EduTool software

To start the EduTool software the user has to choose (double click) the EduTool icon from the desktop or Start menu. The EduTool steering panel will show up in the top right corner of the screen (default position).

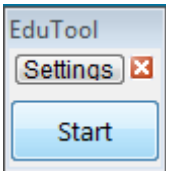

Button Settings allows to calibrate interactive whiteboard or to change settings. To activate EduTool session, the user should click on the button Start

3.1.1 The EduTool application

The initial screen of EduTool application will appear on the screen after choosing (double click) button ***Settings***.

Select button ***Settings*** in order to calibrate or change settings of interactive whiteboard. Otherwise select button ***Close*** to close the window. There is also possibility to change the language in this window.

all rights reserved

Calibration window will show up on the screen after selecting the ***Camera Settings*** option.

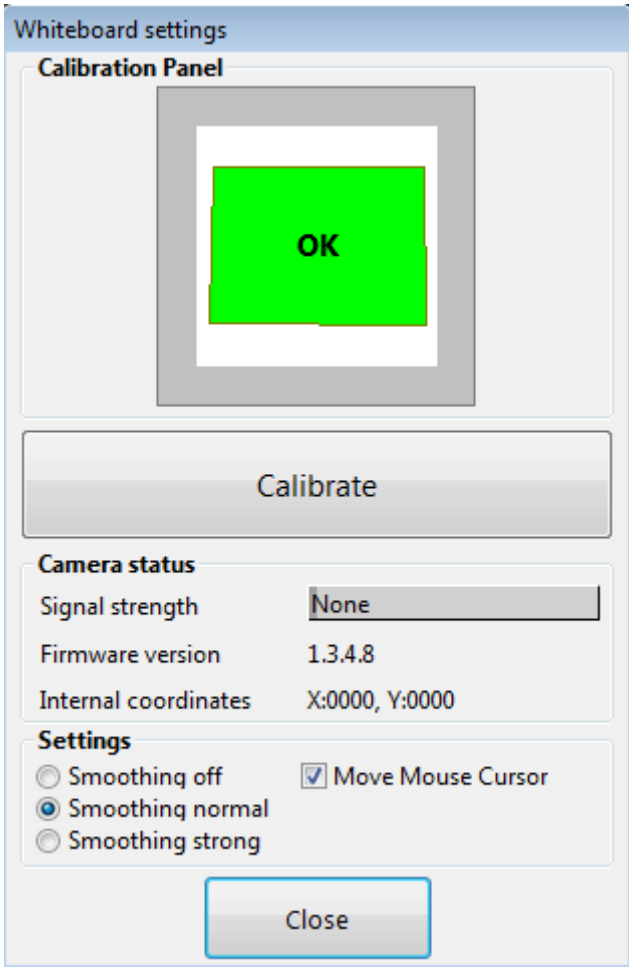

The window **Camera Settings** is divided into 3 parts:

- calibration panel,
- camera status,
- settings.

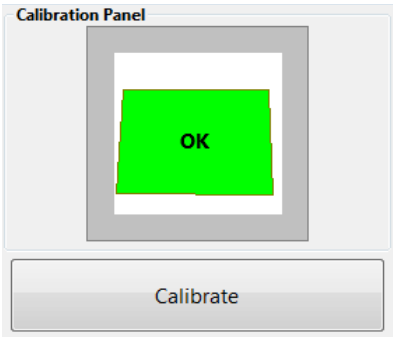

Calibration Panel allows to calibrate the interactive whiteboard. Press the **Calibrate** button in order to start calibration. There will be 4 calibration points showing up on the screen. Using the electronic pen, the user should click on every point. The pen must be pointed precisely at the

all rights reserved

centre (cross) of each point, the button must be pressed and kept pressed until the full green rotation is done. The calibration should be done very precisely in order to get best possible comfort in using interactive whiteboard. If camera was properly positioned then after calibration the view window will be green. Otherwise camera position should be corrected (see chapter 3.2).

***Attention**: the view window shows the picture seen by the camera. This window is updated after every calibration. The colorful area inside the window shows the working screen (the picture shown by the projector) on the area seen by the camera (white rectangle inside the gray frame). If the camera is set incorrectly, which means it does not "see" the whole working screen, it will be notified with the color change to yellow (one corner cannot be seen) or red (part of the screen cannot be seen) and an announcement of the necessity of correcting the camera position. The board works correctly when the green color is shown. When red color appear then board will stop operating mouse cursor (the option "Move mouse cursor" will be unchecked) and will work to a limited extend; camera position should be corrected and calibration repeated. ZOOM in projector should be set to minimum.*

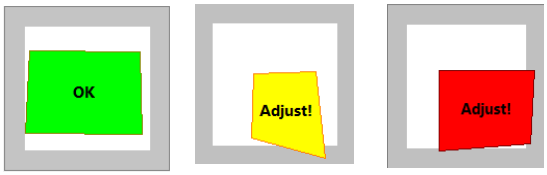

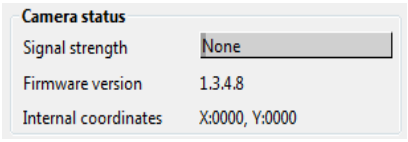

Camera status panel allows to trace working parameters and to update firmware in the camera.

- **Signal strength:** the information of the level of the visibility of the electronic pen. The value changes constantly during the operating the board. The best comfort is obtained in the green colour.
- **Firmware version:** firmware version of the camera. Firmware is updated automatically. If the firmware version in not up-to-date, the button ***Upgrade*** will be visible. Just click the button ***Upgrade*** and follow the instruction on the screen. If the firmware version in up-to-date, the button ***Upgrade*** will not be visible.
- **Internal coordinates:** electronic pen position - vertical and horizontal co-ordinates of the electronic pen changing in the range 0-9999; helpful in camera positioning (see part 3.2).

all rights reserved



Settings panel allows to change interactive whiteboard working parameters as well as support for proper camera positioning.

- **Smoothing:** causes the decreasing the effect of roughness of lines. The bigger value the line is smoother but the cursor follows the pen more slowly. Default parameter value is ***Smoothing normal***.
- **Move Mouse Cursor:** box checked (default) causes that the movement of the electronic pen on the board is changed into the mouse movement. Otherwise help in proper camera positioning (see chapter 3.2).

Once calibration is done the windows ***Camera Settings*** should be closed.

3.1.2 The EduTool graphical panel

To activate EduTool session, the user should click on the **Start** button.



After the EduTool session activation all other functions of the computer are not active (are “frozen”). When the Store button is clicked on, the computer comes back to the ordinary mode of work.



The user operates the EduTool software with the electronic pen or finger touch pen. To make the operation easier, EduTool offers context help. After pointing at the field it will show the full function title.

all rights reserved

Every tool block (Color, Tool, Boards) can remain „closed” or „open” after clicking in the block title.

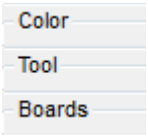

Description of the particular symbols on the toolbar

Start/stop the session	
	Opens the toolbar of the EduTool software. The present picture will be frozen and it will be possible to operate graphically on it
	Closes the EduTool toolbar but keeps the session active.
	Closes the EduTool permanently. Interactive whiteboard will stop working.
History	
	Allows to swap between screens which are being stored on line during each session – i.e. till shut down of EduTool application. Screens are being stored automatically and can be edited. Screens are saved as graphic png files and are being stored in the catalog „Users/***user_name***/EduTool Docs/***date***”. There are max. 500 files to be stored during one session.
Pen	
	Allows to select writing style: • pen – covering line • marker – transparent line
Size	
	Allows to select the line width of all graphic element like a free draw, a straight line, an arrow, a triangle, a rectangle.
Color	
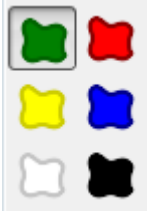	Allows to select color. The chosen color is obligatory for all graphic functions

all rights reserved

Tool	
	Free draw – allows free writing on the screen. To write the user has to press the button on (or touch the finger pen) and move the pen.
	Straight line - allows drawing a straight line. The pen should be put at the beginning of the line and next, keeping the button pressed (or touch the finger pen), moved till the end of the line.
	Arrow – allows drawing an arrow. The pen should be put at the beginning of the arrow and next, keeping the button pressed (or touch the finger pen), moved till the end of the arrow.
	Double arrow – allows drawing an double arrow. The pen should be put at the beginning of the arrow and next, keeping the button pressed (or touch the finger pen), moved till the end of the arrow.
	Rectangle - allows drawing a rectangle. Point with the pen (or touch the finger pen) at the corner of the rectangle and next, keeping the pen button pressed move it to reach the wanted size of the rectangle. The outline of the rectangle will be plotted on the screen.
	Filled rectangle - allows drawing a filled rectangle. Point with the pen (or touch the finger pen) at the corner of the rectangle and next, keeping the pen button pressed move it to reach the wanted size of the rectangle. The filled rectangle will be plotted on the screen.
	Circle - allows drawing a circle. Point with the pen (or touch the finger pen) at the beginning of the circle and next, keeping the pen button pressed, move it to reach the wanted size of the circle. The outline of the circle will be plotted on the screen.
	Filled circle - allows drawing a filled circle. Point with the pen (or touch the finger pen) at the beginning of the circle and next, keeping the pen button pressed, move it to reach the wanted size of the circle. The filled circle will be plotted on the screen.
	X (no) - sign – allows to put X sign - a symbol of a proper answer.
	V (yes) - sign – allows to put V sign - a symbol of a wrong answer.
	Eraser - allows to erase parts of pictures created with the EduTool tools.
	Text entry – allows to write a text in the place pointed by the electronic pen. It is activated by pressing the button of the electronic pen or touching the finger pen. Text can be entered from the opened virtual keyboard or PC keyboard.

all rights reserved

	Undo last operation - allows to undo last operation.
	Screen magnification (zoom) - allows to enlarge the screen in the place pointed by the electronic pen. It is activated by pressing the button of the electronic pen or touching the finger pen. Magnification factor according to the selection in **Size** function.
	Curtain – allows to shadow the screen: • To drag the curtain point with the pen the selected edge of the window and drag it. Curtain can be drag from up, down, left or right sides. • To activate „telescope” user should point the place with electronic pen and press the button. Size of the „telescope” according to the selection in **Size** function.
	Print – allows to print the current screen. At the time of printing graphic panel EduTool temporarily disappears. Appears again after clicking on any point of the screen.
Boards	
	Blank whiteboard - allows to open a white background window.
	Lined whiteboard - allows to open a lined white background window.
	Three-lined whiteboard - allows to open a three-lined white background window.
	Graph-paper whiteboard - allows to open a graph-paper white background window.
	Stave whiteboard - allows to open a stave white background window.
	Graph-paper whiteboard with coordinates - allows to open a graph-paper white background window with coordinates.
Right mouse button	
	Right mouse button - to activate keep the electronic pen button pressed for about 3 seconds. Mouse icon will appear on the screen. Pressing the button again will return to normal operation.

all rights reserved

3.2 Positioning and the first camera calibration

The positioning and the first calibration of the camera must be done during the initial launching the system. The procedure should be repeated in case of the computer change and/or the camera position change.

To conduct the first setting and the camera calibration the user must follow the following steps:

STEP 1: **Camera positioning**

The camera should be located in a way to "see" the whole working area – that means the picture displayed by the projector. The EduTool application will help by giving coordinates of the electronic pen read from the camera in the range from 0 to 9999 both vertically and horizontally.



Firstly, **turn off** the mouse mode to read the position of the electronic pen (without moving the mouse cursor). To make it the user should remove the marking of "Move mouse cursor" option in the menu of the ***Camera Settings*** window:



Now, moving the electronic pen (with the button pressed) the user can define the camera working area. The electronic pen movement will be reflected by co-ordinates change [**Internal coordinates**]. It is enough to check the visibility (response for pressing and depressing the button of the pen) in every corner of working area. Moving the electronic pen out of the camera's view will cause stopping the changes of the cursor coordinates and no reaction for pressing the button of the pen.

Hint: sometimes it is more convenient to trace camera light instead of coordinates. During pen visibility camera lights in green-yellow

all rights reserved

(otherwise is red).

Once finished the marking of “Move mouse cursor” option in the menu of the EduTool application window should be checked again:



STEP 2: Calibration

Press the Calibration button in the EduTool application window.



There will be 4 calibration points showing up on the screen (up-left, down-left, up-right, down right). Using the electronic pen, the user should click on every point in the following way:

- the pen must be pointed precisely at the centre (cross) of each point,
- the button must be pressed and kept pressed until the full green rotation is done (less then 1 second).

The calibration should be done very precisely in order to get best possible comfort in using interactive whiteboard. If camera was properly positioned then after calibration the view window will be green. Otherwise camera position should be corrected.

all rights reserved

3.3 Electronic pen operation

Electronic pen operation is similar to handling one-button mouse. There is a button in the body of the electronic pen that activates the pen. Only after pressing the button the pen performs the action. Pen without the button pressed remains inactive. Double click is performed by quick, double-pressing the button.

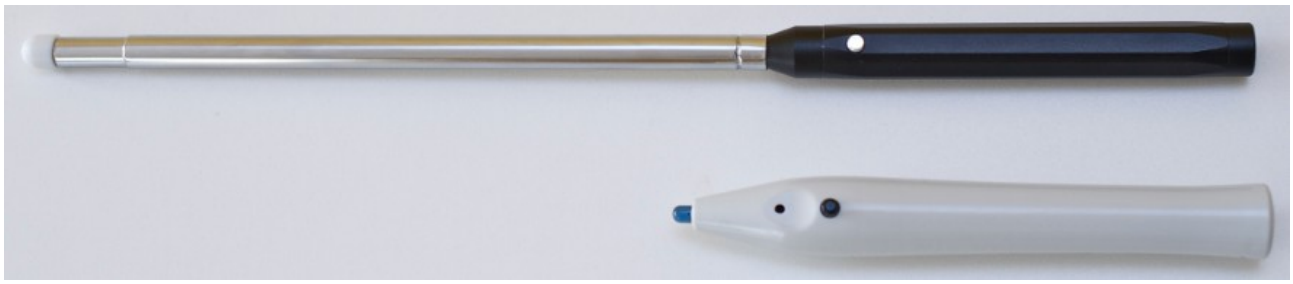

Example: to draw a line place the pen tip at the beginning, press and hold the button to move the pen in place of the end of the line, then release the button.

3.4 FAQ

Question	Answer
How often do I have to do calibration?	Every time when the camera or screen change their position. It will be visible as a shift between mouse cursor and electronic pen position.
Do I have to repeat the calibration if the camera is attached permanently on the projector hanged under the ceiling?	No, you do not. In such a case the user do not have to repeat the calibration. It can be repeated at any moment when the user is not sure if the board is calibrated correctly. New calibration is necessary when a new computer is launched to the set
The application does not see the camera. The announcement says “The camera is not connected”.	Check if the USB cable is attached both to the camera and the computer. Check if there is the red light in the camera.

all rights reserved

I cannot calibrate the board. No reaction for pressing electronic pen's button. I can calibrate only 2 points.	Correct the camera position (see chapter 3.2). Darken the classroom.
I am moving the electronic pen on the screen and nothing is happening .	Check whether camera and computer are connected with USB cable. Push the button on the electronic pen in order to activate it. Make sure that while moving the pen on the screen (with the button pressed), the camera light twinkles green. Make sure that camera is properly positioned (see chapter 3.2).
While moving the pen the lamp does not twinkle green	The electronic pen is out of the visual area of the camera. Move the camera closer to the screen. The camera is disarranged. Correct the position of the camera (see chapter 3.2). The battery in the electronic pen is discharged
While moving the electronic pen on the screen, the lamp twinkles with breaks.	Make sure that you hold the electronic pen at a proper angle. Check the batteries in the electronic pen. Change the battery. The camera is on the edge of working range (up to 5 m from the screen). Move the camera closer to the screen. The camera does not work in the distance farther than 5 m from the screen .

all rights reserved

4 Maintenance instruction

4.1 Battery replacing

The only elements of the Polish Interactive Whiteboard which need periodical checking are the electronic pen and the telescopic electronic pointer. Both are powered with the batteries. When the batteries are discharged the pen stops working. In such a case the batteries should be replaced.

To replace the batteries in the electronic pen the user should follow the steps:

- unscrew two screws and disconnect both parts of the pen ,
- take the old batteries out and put in new batteries keeping the same polarity (plus down that is to the diode),
- put together and screw the pen up .

To replace the batteries in the telescopic electronic pointer the user should follow the steps:

- unscrew the cap pf the pointer,
- take the old batteries out and put in new batteries keeping the same polarity,
- screw the cap of the pointer.

all rights reserved

5 FAQ

Question	Answer
„Writing” on the screen doesn't match with electronic pen position.	Make the calibration.
The interactive whiteboard works upside-down (right-left, top-bottom).	Make the calibration. Turn the camera upside-down.
The interactive whiteboard does not want to calibrate	Darken the room . Move out lamps, light bulbs, reflective objects from the area of camera view. Decrease the distance of the camera to the screen (maximum distance 5m).
The interactive whiteboard does not see the electronic pen in some areas	Position the camera correctly . Move the camera closer to the screen.
While moving the electronic pen, the cursor is skipping, leaving zigzag lines.	Remove the reflective objects from the area of camera view darken the room . Darken the classroom.
The line drawn by the pen is not smooth	Increase „Sensitivity correction” parameter.
Theinteractive whiteboard stops seeing the electronic pen	Replace the batteries in the electronic pen.
I am moving the electronic pen on the screen and nothing is happening .	Check whether camera and computer are connected with USB cable. Push the button on the electronic pen in order to activate it. Make sure that while moving the pen on the screen (with the button pressed), the camera light twinkles green.
While using the pen the lamp does not twinkle green	The electronic pen is out of the visual area of the camera. Move the camera closer to the screen. The camera is disarranged. Correct the position of the camera. The batteries in the electronic pen are discharged. Change them.

all rights reserved

6 Technical specification

Operating system

- Windows XP (**with Service Pack 3**), Windows Vista, Windows 7, Windows 8, Linux, MAC OS from 10.6.

Electronic pens:

- Power feed of:
  - electronic pen: two batteries AA LR6 (alkaline) 1,5V or FR6 (lithium-ion) 1,7V
  - telescopic electronic pointer: two batteries AAA LR3 (alkaline) 1,5V

  It is also possible to use alkaline rechargeable batteries. Don't use accu NiCd and NiMH batteries.
- Current input consumption by diode IR – about 110 mA.
- Continuous working time with one set of alkaline batteries :
  - for electronic pen: 10 - 15 hours,
  - for telescopic electronic pen: about 3 hours.

Camera:

- Camera feed - 5V from USB
- Current consumption < 50 mA
- View camera angle about 35 degrees both horizontally and vertically
- Maximum width of the screen = ½ of the distance (2.5m)
- Maximum distance between the camera and the screen – 5m
- Camera resolution: 256x256 points.
- Positioning accuracy: 1/16 point (4096x4096 points)
- Screen diagonal:

Distance to screen	Screen diagonal
2 m	55"
3 m	82"
4 m	110"

all rights reserved